




HD Panoramic Network Camera

User Manual

Please read this instruction carefully before operating the unit and keep it for further reference

The following symbols or words may be found in this manual.

Symbols/Words	Description
 Warning	Indicates a medium or low potential hazardous situation which, if not avoided, will or could result in slight or moderate injury
 Caution	Indicates a potential risk which, if not avoided, will or could result in device damage, data loss, lower performance or unexpected results
 Note	Provides additional information to emphasize or supplement important points of the text.

About the Manual

- This manual is suitable for many models. All examples, screenshots, figures, charts, and illustrations used in the manual are for reference purpose, and actual products may be different with this Manual.
- Please read this user manual carefully to ensure that you can use the device correctly and safely.
- Within the maximum scope permitted by the law, the products described in this Manual (including hardware, software, firmware, etc.) are provided “AS IS”. The information in this document (including URL and other Internet site reference data) is subject to change without notice. This Manual may contain technical incorrect places or printing errors. This information will be periodically updated, and these changes will be added into the latest version of this Manual without prior notice.
- In this manual, the trademarks, product names, service names and company names that are not owned by our company are the properties of their respective owners.

Use of the Product

- This product should not be used for illegal purposes.
- The company does not allow anyone to use the Company's products to infringe the privacy, personal information, and portrait rights of others. The user shall not use this product for any illegal use or any prohibited use under these terms, conditions, and declarations. When using this product, the user shall not damage, disable, overload or obstruct any of the hardware of this product in any way, or interfere with the use of this product by any other users. Also, the user should not attempt to use the product or the software, by hacking, stealing the password, or any other means.

Electrical Safety

- This product is intended to be supplied by a Listed Power Unit, marked with 'Limited Power Source', 'LPS' on unit, output rated minimum 12V/1.5 A or POE 48V/ 350mA, no more than 2000m altitude of operation and Tma=60 Deg.C.
- As for the modes with PoE function, the function of the ITE being investigated to IEC 60950-1 standard is considered not likely to require connection to an Ethernet network with outside plant routing, including campus environment and the ITE is to be connected only to PoE networks without routing to the outside plant.
- Improper handling and/or installation could run the risk of fire or electrical shock.
- The product must be grounded to reduce the risk of electric shock.
- ⚠ Warning: Wear anti-static gloves or discharge static electricity before removing the bubble or cover of the camera.

Environment

- Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage and installation.
- Avoid aiming the camera directly towards extremely bright objects, such as, sun, as this may damage the image sensor.
- Keep away from heat sources such as radiators, heat registers, stove, etc.
- Do not expose the product to the direct airflow from an air conditioner.
- Do not block any ventilation openings and ensure proper ventilation around the camera.
- Do not place the device in a damp, dusty extremely hot or cold environment, or the locations with strong electromagnetic radiation or unstable lighting.
- Make sure that no reflective surface is too close to the camera lens. The illumination LED from the camera may reflect back into the lens, resulting in image blur.

Operation and Daily Maintenance

- There are no user-serviceable parts inside. Please contact the nearest service center if the product does not work properly.
- Please shut down the device and then unplug the power cable before you begin any maintenance work.
- ⚠ Warning: All the examination and repair work should be done by qualified personnel.
- Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.
- Always use the dry soft cloth to clean the device. If there is too much dust, use a cloth cleaning (such as using cloth) may result in poor illumination functionality and/or illumination LED reflection.
- Dome cover is an optical device, please don't touch or wipe the cover surface directly during installation and use. For dust, use oil-free soft brush or hair dryer to remove it gently; for grease or finger print, use oil-free cotton cloth or paper soaked with detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is

not clean enough.

White Light Illuminator (if supported)

- DO NOT turn on the white light when you install or maintain the camera. Please wear appropriate eye protection when you want to test the white light.
- DO NOT stare at the operating light source. It will probably be harmful to your eyes.
- The white light illuminators should at no time be covered when the camera is running to prevent overheating and the possible risk of fire.

Privacy Protection

- When installing cameras in public areas, a warning notice shall be given in a reasonable and effective manner and clarify the monitoring range.
- As the device user or data controller, you might collect the personal data of others, such as face, car plate number, etc. As a result, you shall implement reasonable and necessary measures to protect the legitimate rights and interests of other people, avoiding data leakage, improper use, including but not limited to, setting up access control, providing clear and visible notice to inform people of the existence of the surveillance area, providing required contact information and so on.

Disclaimer

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, Our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations.

Cybersecurity Recommendations

- Use a strong password. At least 8 characters or a combination of characters, numbers, and upper and lower case letters should be used in your password.
- Regularly change the passwords of your devices to ensure that only authorized users can access the system (recommended time is 90 days).
- It is recommended to change the service default ports (like HTTP-80, HTTPS-443, etc.) to reduce the risk of outsiders being able to access.
- It is recommended to set the firewall of your router. But note that some important ports cannot be closed (like HTTP port, HTTPS port, Data Port).
- It is not recommended to expose the device to the public network. When it is necessary to

be exposed to the public network, please set the external hardware firewall and the corresponding firewall policy.

- It is not recommended to use the v1 and v2 functions of SNMP.
- In order to enhance the security of WEB client access, please create a TLS certificate to enable HTTPS.
- Use black and white list to filter the IP address. This will prevent everyone, except those specified IP addresses from accessing the system.
- If you add multiple users, please limit functions of guest accounts.
- If you enable UPnP, it will automatically try to forward ports in your router or modem. It is really very convenient for users, but this will increase the risk of data leakage when the system automatically forwards ports. Disabling UPnP is recommended when the function is not used in real applications.
- Check the log. If you want to know whether your device has been accessed by unauthorized users or not, you can check the log. The system log will show you which IP addresses were used to log in your system and what was accessed.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

1. FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2. FCC conditions:

- This device complies with part 15 of the FCC Rules. Operation of this product is subject the following two conditions:
- This device may not cause harmful interface.
- This device must accept any interference received, including interference that may cause undesired operation.

RoHS

The products have been designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible manner.

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.

Table of Contents

1	Network Connection.....	1
1.1	LAN.....	1
1.1.1	Access through IP-Tool	1
1.1.2	Directly Access through IE.....	3
1.2	WAN.....	5
2	Live View	8
3	Network Camera Configuration.....	10
3.1	System Configuration	10
3.1.1	Basic Information	10
3.1.2	Date and Time	10
3.1.3	Local Config.....	11
3.1.4	Storage.....	11
3.2	Image Configuration	14
3.2.1	Display Configuration	14
3.2.2	Video / Audio Configuration	16
3.2.3	OSD Configuration.....	17
3.2.4	Video Mask	18
3.2.5	ROI Configuration.....	19
3.3	Alarm Configuration.....	20
3.3.1	Motion Detection.....	20
3.3.2	Exception Alarm.....	21
3.3.3	Alarm In	23
3.3.4	Alarm Out.....	24
3.3.5	Alarm Server	25
3.3.6	Audio Alarm.....	26
3.4	Event Configuration.....	27
3.4.1	Video Exception	28
3.4.2	Line Crossing.....	29
3.4.3	Region Intrusion	31
3.4.4	Region Entrance	33
3.4.5	Region Exiting.....	33
3.5	Network Configuration	34
3.5.1	TCP/IP.....	34
3.5.2	Port	35
3.5.3	Server Configuration	35
3.5.4	Onvif.....	36
3.5.5	DDNS	37
3.5.6	SNMP	38
3.5.7	802.1x.....	40
3.5.8	RTSP.....	40

3.5.9	RTMP	41
3.5.10	UPNP	41
3.5.11	Email	42
3.5.12	FTP	43
3.5.13	HTTP POST	44
3.5.14	HTTPS	45
3.5.15	QoS	46
3.6	Security Configuration	47
3.6.1	User Configuration	47
3.6.2	Online User	49
3.6.3	Block and Allow Lists	49
3.6.4	Security Management	49
3.7	Maintenance Configuration	50
3.7.1	Backup and Restore	50
3.7.2	Reboot	51
3.7.3	Upgrade	51
3.7.4	Operation Log	52
4	Search	53
4.1	Image Search	53
4.2	Video Search	55
4.2.1	Local Video Search	55
4.2.2	SD Card Video Search	56
Appendix		58
Appendix 1 Troubleshooting		58

1 Network Connection

System Requirement

For proper operating the product, the following requirements should be met for your computer.

Operating System: Windows 7 Home basic or higher

CPU: 2.0GHz or higher

RAM: 1G or higher

Display: 1920*1080 resolution or higher (recommended)

Web browser: IE (plug-in required)/ Firefox/Edge/Safari/Google Chrome

It is recommended to use the latest version of these web browsers.

The menu display and operation of the camera may be slightly different by using the browser with plug-in or without plug-in. Installing the applicable plug-in will display more functions of the camera.


Connect IPC via LAN or WAN. Here only take IE browser for example. The details are as follows:

1.1 LAN


In LAN, there are two ways to access IPC: 1. access through IP-Tool; 2. directly access through IE browser.

1.1.1 Access through IP-Tool

Network connection:

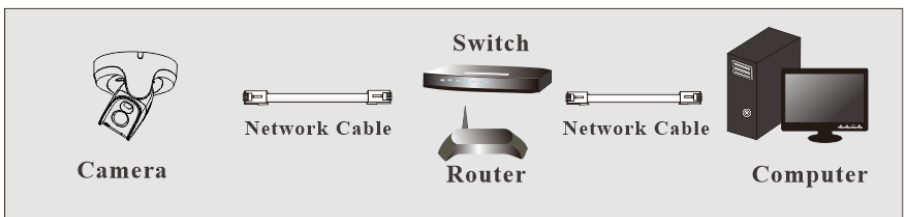

- ① Make sure the PC and IPC are connected to the LAN and the IP-Tool is installed in the PC.
- ② Double click the IP-Tool icon on the desktop to run this software as shown below:

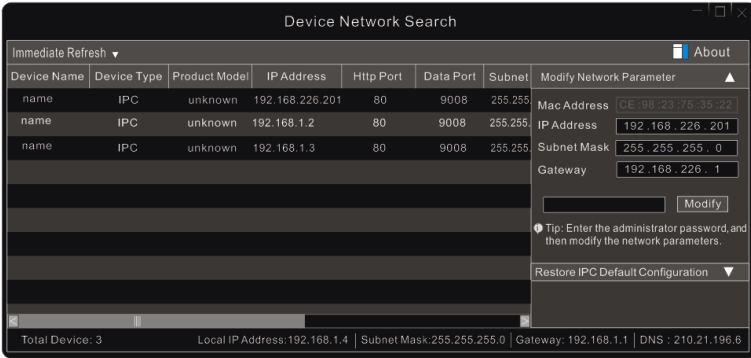

③ Double click the IP address and then the system will open a web browser to connect the device. After you read the privacy statement, check and click “Already Read”. Then activate the device.

Device Activation

User Name

Activate Onvif User

New Password

8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included.

Confirm Password

Please self-define the password of admin according to the tip. If “Activate Onvif User” is enabled, the ONVIF user can be activated simultaneously. By default, the ONVIF password will match the admin password that you set. When you connect the camera through the ONVIF protocol in the third-party platform, you can use the default username and the password set above to connect. Should you wish to change the ONVIF password to a different password than your admin password, go to the ONVIF section to change the password. (Config→Network→Ports/Connections→Onvif)

After that, follow directions to download, install and run the Active X control if prompted. Re-connect your camera via IE browser and then a login box will appear.

The login form contains the following elements:

- Name:** A text input field containing the text "admin".
- Password:** A password input field with 10 dots and a toggle icon on the right.
- Stream Type:** A dropdown menu showing "4096x1800 20fps" with a downward arrow.
- Language:** A dropdown menu showing "English" with a downward arrow.
- Forgot Password?:** A text link located below the language dropdown.
- Login:** A blue button with the text "Login" centered on it.

Please enter the user name (admin) and password. Then select the stream type and language as needed.

Stream Type: The plug-in free live view only supports 1080P or lower resolution.

The Security Question form contains the following elements:

- Confirm Password:** A text input field.
- Security Question1:** A dropdown menu with the selected option "Your father's name?".
- Answer:** A text input field.
- Security Question2:** A dropdown menu with the selected option "Your mother's name?".
- Answer:** A text input field.
- Security Question3:** A dropdown menu with the selected option "Your seniors school name?".
- Answer:** A text input field.
- OK:** A grey button with the text "OK" centered on it.

If you forget the admin password, you can reset the password by clicking **Forget Password** on the login page. Then you can reset the password by the security questions and answers you set.

You can set the account security question during the activation, or you can go to **Config → Security → User**, click **Safety Question**, select the security questions and input your answers.

1.1.2 Directly Access through IE

The default network settings are as shown below:

IP address: **192.168.226.201**

Subnet Mask: **255.255.255.0**

Gateway: **192.168.226.1**


HTTP: **80**

Data port: **9008**


Use the above default settings when logging in the camera for the first time. Directly connect the camera to the computer through network cable.



① Manually set the IP address of the PC and the network segment should be as the same as the default settings of the IP camera. Open the network and share center. Click “Local Area Connection” to pop up the following window.

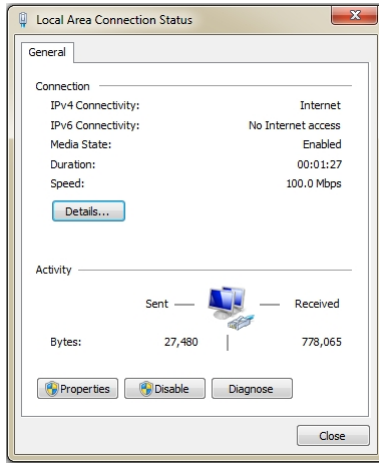


Select “Properties” and then select internet protocol according to the actual situation (for example: IPv4). Next, click the “Properties” button to set the network of the PC.

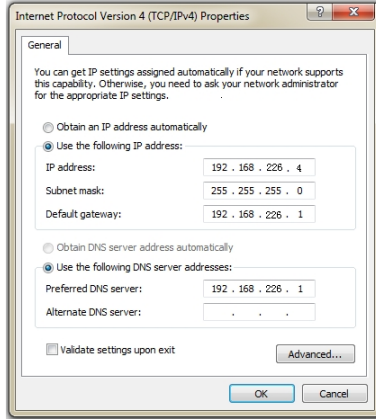

- ② Open a web browser and enter the default address of IPC and confirm.
- ③ Follow directions to download and install the Active X control.
- ④ Enter the default username and password in the login window and then enter to view.

1.2 WAN

➤ Access through the router or virtual server

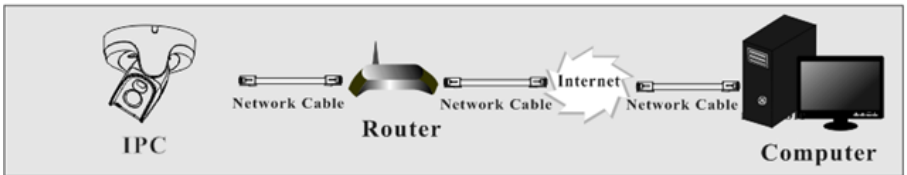

- ① Make sure the camera is connected to the local network and then log in the camera via LAN and go to Config→Network→Port menu to set the port number.

HTTP Port	80
HTTPS Port	443
Data Port	9008
RTSP Port	554

Port Setup

- ② Go to Config →Network→TCP/IP menu to modify the IP address.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input type="radio"/> Obtain an IP address automatically			
<input checked="" type="radio"/> Use the following IP address			
IP Address	192.168.226.201	Test	
Subnet Mask	255.255.255.0		
Gateway	192.168.226.1		
Preferred DNS Server	210.21.196.6		
Alternate DNS Server	8.8.8.8		

IP Setup

③ Go to the router’s management interface through IE browser to forward the IP address and port of the camera in the “Virtual Server”.


Port Range						
Application	Start	End	Protocol	IP Address	Enable	
1	9007	to 9008	Both	192.168.1.201	<input checked="" type="checkbox"/>	
2	80	to 81	Both	192.168.1.201	<input checked="" type="checkbox"/>	
3	10000	to 10001	Both	192.168.1.166	<input type="checkbox"/>	
4	21000	to 21001	Both	192.168.1.166	<input type="checkbox"/>	

Router Setup

④ Open a web browser and enter its WAN IP and http port to access (for example, if the http port is changed to 81, please enter “192.198.1.201:81” in the address bar of web browser to access).


➤ **Access through PPPoE dial-up**

Network connection

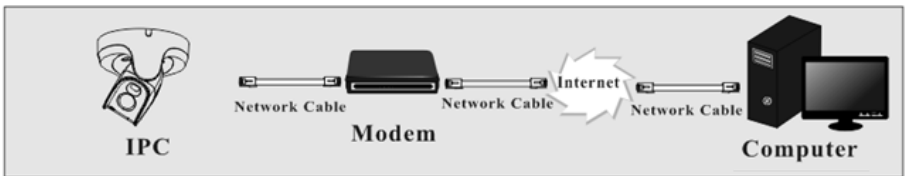

Access the camera through PPPoE auto dial-up. The setup steps are as follow:


- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP→PPPoE Config menu. Enable PPPoE and then enter the user name and password from your internet service provider.

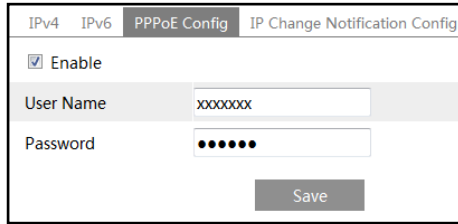

- ③ Go to Config →Network→DDNS menu. Before configuring the DDNS, please apply for a domain name first. Please refer to DDNS configuration for detail information.
- ④ Open a web browser and enter the domain name and http port to access.

➤ **Access through static IP**

Network connection

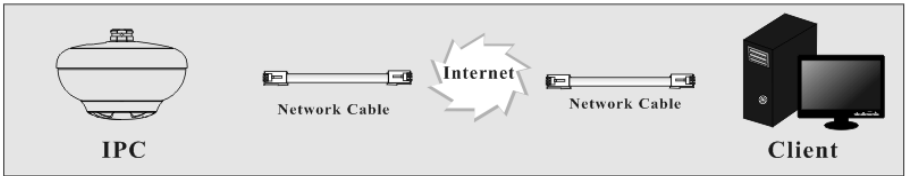


The setup steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP menu to set the IP address. Check “Use the following IP address” and then enter the static IP address and other parameters.
- ③ Open a web browser and enter its WAN IP and http port to access.





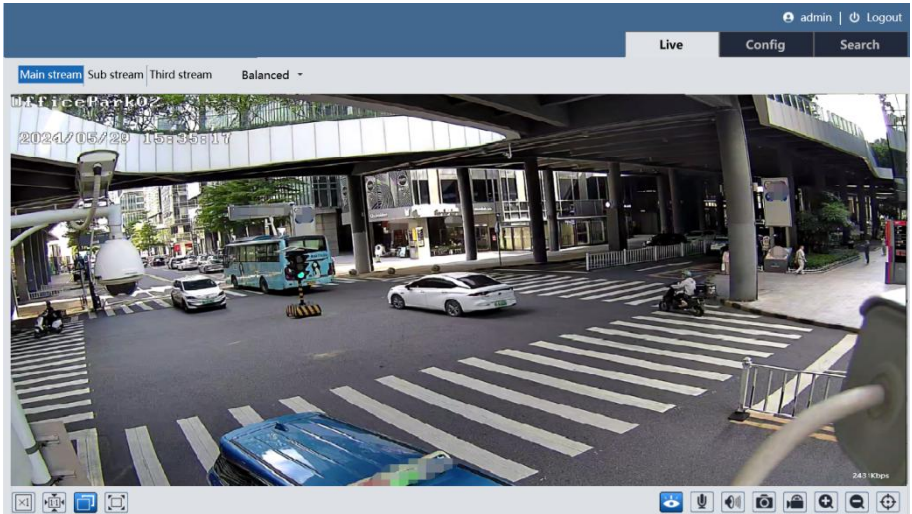















2 Live View



After logging in, the following window will be shown.



Plug-in free live view: when the main stream is set over 1080P, only the sub stream or third stream tab can be displayed on the above interface by default.

The following table is the instructions of the icons on the live view interface.

Icon	Description	Icon	Description
	Original size		Rule information display
	Fit correct scale		SD card recording indicator
	Auto (fill the window)		Color abnormal indicator
	Full screen		Abnormal clarity indicator
	Start/stop live view		Scene change indicator
	Start/stop two-way audio		Line crossing indicator
	Enable/disable audio		Region intrusion indicator
	Snapshot		Sensor alarm indicator
	Start/stop local recording		Motion alarm indicator
	Zoom in		Region entrance indicator

Icon	Description	Icon	Description
	Zoom out		Region exiting indicator

- Those smart alarm indicators will flash only when the camera supports those functions and the corresponding events are enabled.
- In full screen mode, double click on the mouse or press the ESC key on the keyboard to exit.
- Plug-in free live view: two-way audio and local recording are not supported and the preview mode switch (real-time/balanced/fluent mode) is not available too.

To set the stream profile, select Main stream, Sub stream, or Third stream.

Main stream: Delivers high definition video for real-time monitoring, recording and storage.

Sub stream: Delivers high-definition video for real-time monitoring, recording and storage.

Third stream: Delivers low-definition video.

3 Network Camera Configuration

In the Webcam client, choose “Config” to go to the configuration interface.

Note: Wherever applicable, click the “Save” button to save the settings.

3.1 System Configuration

3.1.1 Basic Information

In the “Basic Information” interface, the system information of the device is listed.

Device Name	IPC
Product Model	
Brand	Customer
Software Version	5.1.1.0(57836)
Software Build Date	2024-06-04
Onvif Version	23.12
OCX Version	2.2.7.85
MAC	58:5b:69:07:81:33
About this machine	View
Privacy Statement	View

3.1.2 Date and Time

Go to *Config* → *System* → *Date and Time*. Please refer to the following interface.

Zone		Date and Time	
Time Zone:	GMT+08 (Beijing, Hong Kong, Shanghai, Taipei)		
<input type="checkbox"/> DST			
<input checked="" type="radio"/> Auto DST			
<input type="radio"/> Manual DST			
Start Time	May	First	Tuesday 15 Hour
End Time	August	First	Tuesday 15 Hour
Time Offset	30 Minutes		

Select the time zone and DST as required.

Note: The time zone of the camera and the computer must be the same. It is recommended to modify the time zone of the camera according to the time zone of the computer. If the time zone of the computer is modified, the current web client needs to be closed. Then re-open it

and log in again.

Click the “Date and Time” tab to set the time mode and time format.

3.1.3 Local Config


Go to *Config* → *System* → *Local Config* to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable audio in the recorded files.

Show Bitrate: enable or disable bitrate display on the live video.

Additionally, “Local smart snapshot storage” can be enabled or disabled here. If enabled, the captured pictures triggered by smart events (like line crossing detection, region intrusion, etc.) will be saved to the local PC.

3.1.4 Storage

Go to *Config* → *System* → *Storage* to go to the interface as shown below.

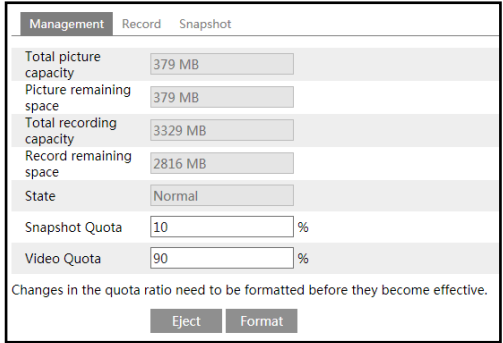

● **SD Card Management**

Click the “Format” button to format the SD card. All data will be cleared by clicking this button.


Click the “Eject” button to stop writing data to SD card. Then the SD card can be ejected safely.

Snapshot Quota: Set the capacity proportion of captured pictures on the SD card.

Video Quota: Set the capacity proportion of record files on the SD card.

● **Schedule Recording Settings**

1. Go to Config→System→Storage→Record to go to the interface as shown below.

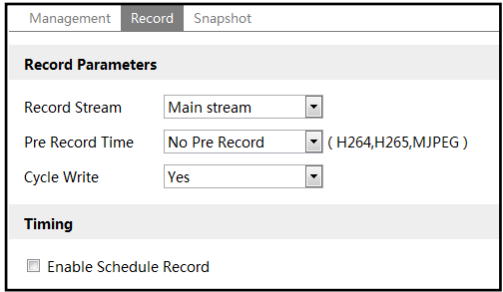

2. Set record stream, pre-record time, cycle writing.

Pre Record Time: Set the time to record before the actual recording begins.

Overwrite (Cycle Write): the earliest record data will be replaced by the latest when the disks are full.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.

Erase Add

Week Schedule

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun.	00:00-24:00																								
	Manual Input																								
Mon.	00:00-24:00																								
	Manual Input																								
Tue.	00:00-24:00																								
	Manual Input																								
Wed.	00:00-24:00																								
	Manual Input																								
Thu.	00:00-24:00																								
	Manual Input																								
Fri.	00:00-24:00																								
	Manual Input																								
Sat.	00:00-24:00																								
	Manual Input																								

Holiday Schedule

Date

+

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

00:00-24:00

Manual Input

Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

Day schedule

Set the alarm time for alarm a special day, such as a holiday.

Note: Holiday schedule takes priority over weekly schedule.

● **Snapshot Settings**

Go to *Config* → *System* → *Storage* → *Snapshot* to go to the interface as shown below.

Management	Record	Snapshot
Snapshot Parameters		
Image Format	JPEG <input type="button" value="v"/>	
Resolution	1024x452 <input type="button" value="v"/>	
Image Quality	Low <input type="button" value="v"/>	
Event Trigger		
Snapshot Interval	1 <input type="text"/>	Second
Snapshot Quantity	5 <input type="text"/>	
Timing		
<input type="checkbox"/> Enable Timing Snapshot		
Snapshot Interval	5 <input type="text"/>	Second

Set the format, resolution and quality of the image saved on the SD card and the snapshot interval and quantity and the timing snapshot here.

Snapshot Quantity: The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.

Scheduled Snapshot: Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording (See [Schedule Recording](#)).

3.2 Image Configuration

Image Configuration includes Display, Video/Audio, OSD, Video Mask and ROI Config.

3.2.1 Display Configuration

Go to Image→Display interface. The image’s brightness, contrast, hue and saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly shown by switching the configuration file.

Brightness: Set the brightness level of the camera’s image.

Contrast: Set the color difference between the brightest and darkest parts.

Hue: Set the total color degree of the image.

Saturation: Set the degree of color purity. The purer the color, the brighter the image is.

WDR: Digital WDR. WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the

brightness of the bright area and increasing the brightness of the dark area.

Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode

Sharpness: Set the resolution level of the image plane and the sharpness level of the image edge.

Noise Reduction: Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

Backlight Compensation (BLC):

- Off: disables the backlight compensation function. It is the default mode.
- HLC: lowers the brightness of the entire image by suppressing the brightness of the image’s bright area and reducing the size of the halo area.
- BLC: If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.

Antiflicker:

- Off: disables the anti-flicker function. This is used mostly in outdoor installations.
- 50Hz: reduces flicker in 50Hz lighting conditions.
- 60Hz: reduces flicker in 60Hz lighting conditions.

White Balance: Adjust the color temperature according to the environment automatically.

Day/Night Mode: Choose “Auto”, “Day”, “Night” or “Timing”.


If “Timing” is selected, you need to set daytime and night time. For example: if “Daytime” is set to “7:00”, the camera will switch to Day mode at 7:00 o’clock; if “Night time” is set to “17:00”, the camera will switch from Day mode to Night mode at 17:00 o’clock.

White Light Mode: Choose “Auto”, “Manual” or “OFF”.

Frequency: 50Hz and 60Hz can be optional.


Schedule Settings of Image Parameters:

Click the “Profile Management” tab as shown below.

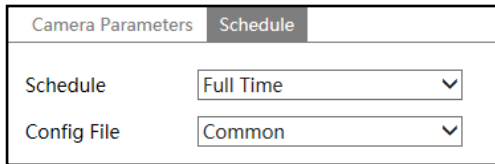

Set full time schedule for common, auto mode and specified time schedule for day and night.


Auto mode: in the daytime, it will automatically perform the day config file set above; at night, it will automatically perform the night config file set above.

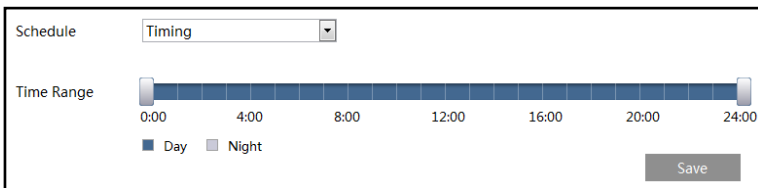

Drag “☀️” icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to schedule, the image configuration mode will automatically switch between day and night according to the schedule.

3.2.2 Video / Audio Configuration

Go to Image→Video / Audio interface as shown below. In this interface, set the resolution, frame rate, bitrate type, video quality and so on subject to the actual network condition.

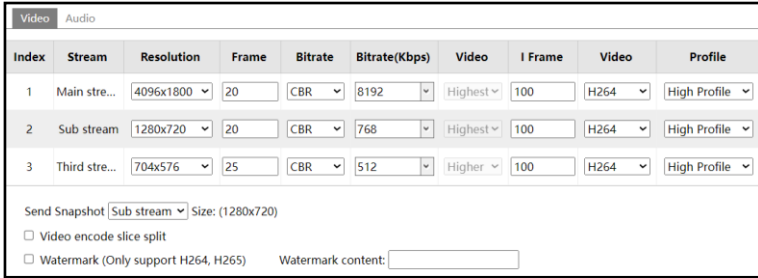

Three video streams can be adjustable.

Resolution: The size of image.

Frame rate: The higher the frame rate, the video is smoother.

Bitrate type: CBR and VBR are optional. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This can help optimize the network bandwidth usage.

Bitrate: it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.

Video Quality: It can be adjusted when the mode is set to VBR. The higher the image quality, the more bitrate will be required.

I Frame interval: It determines how many frames are allowed between a “group of pictures”. When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much movement in the scene, setting the value higher than the frame rate is fine, potentially resulting in less bandwidth usage. However, if the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.

Video Compression: H264+, H265+, H264, H265or MJPEG can be optional. Compared to H.265, H.265+ saves more storage space with the same maximum bitrate in most scenes. Compared to H.264, H.265 reduces the transmission bitrate under the same resolution, frame rate and image quality.


Profile: For H.264. Baseline, main and high profiles are selectable.

Send Snapshot: Select the snapshot stream.

Video encode slice split: If this function is enabled, smooth image can be gotten even though using the low-performance PC.

Watermark: When playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Click the “Audio” tab to go to the interface as shown below.

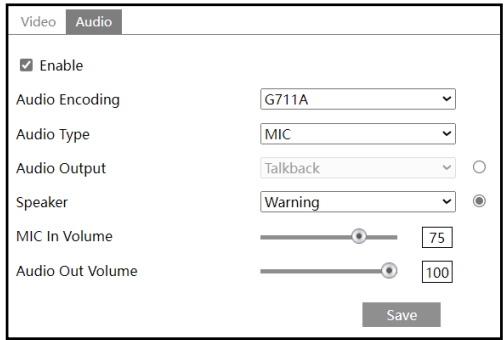

Audio Encoding: G711A and G711U are selectable.

Audio Type: LIN or MIC. (If the internal MIC is supported and used, choose “MIC”. If you want to use external line-level audio input device, choose “LIN”.)

Audio Output: Talkback, warning or auto can be optional. If “Talkback” is selected, the audio output will be used for two-way audio. If “Warning” is selected, the audio output will be used to play the pre-defined audio alarm. If “Auto” is selected, the system will output sound for two-way audio or warning voice as needed. But when it is warning and two-way audio is being enabled simultaneously, two-way audio will be output first.

Speaker: Talkback, warning or auto can be optional. If “Talkback” is selected, the built-in speaker will be used for two-way audio. If “Warning” is selected, the built-in speaker will be used to play the pre-defined audio alarm. If “Auto” is selected, the system will output sound for two-way audio or warning voice as needed. But when it is warning and two-way audio is being enabled simultaneously, two-way audio will be output first.

Select audio output or speaker as needed. Only one of them can be effective.


MIC IN/Audio Out Volume: Set the volume as needed.

3.2.3 OSD Configuration

Go to *Image* → *OSD* interface as shown below.



Set time stamp, device name, OSD content and picture overlap here. After enabling the corresponding display and entering the content, drag them to change their position. Then click the “Save” button to save the settings.

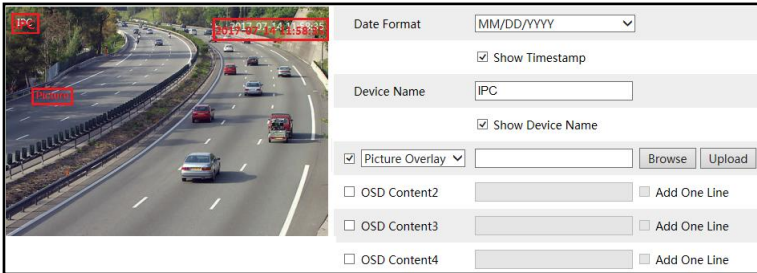

Picture Overlay Settings:


Check “OSD Content1”, choose “Picture Overlay” and click “Browse” to select the overlap picture. Then click “Upload” to upload the overlap picture. The pixel of the image shall not exceed 200*200, or it cannot be uploaded.

3.2.4 Video Mask

Go to *Image* → *Video Mask* interface as shown below. A maximum of 8 zones can be set up.

To set up video mask:

1. Enable video mask.
2. Click direction buttons to change the area you want to mask.
3. Click “Draw Area” and then drag the mouse to draw the video mask area.
4. Click “Add” to add the mask area.

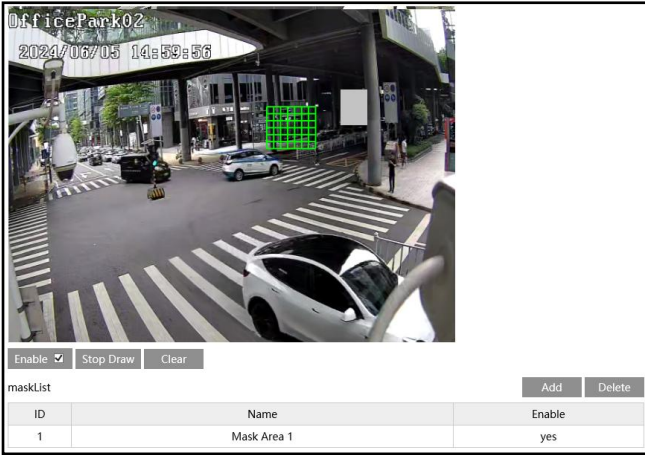


To delete mask area:


1. Select the mask area in the mask area list.
2. Click “Delete” to delete this mask area.

3.2.5 ROI Configuration

Go to **Image** → **ROI Config** interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

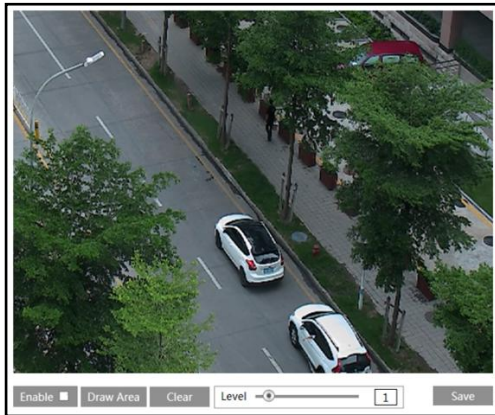

1. Check “Enable” and then click the “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click the “Save” button to save the settings.

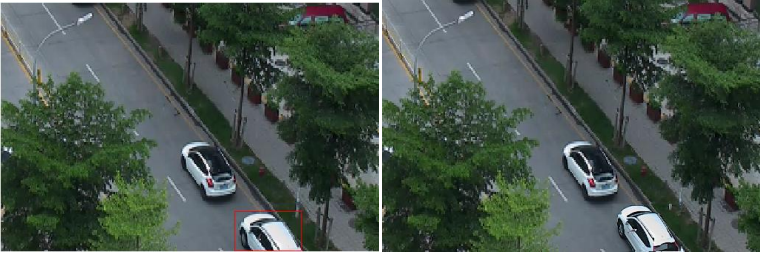

3.3 Alarm Configuration

3.3.1 Motion Detection

Go to **Alarm** → **Motion Detection** to set motion detection alarm.

Detection Config	Area and Sensitivity	Schedule
<input checked="" type="checkbox"/> Enable		
Alarm Holding Time	20 Seconds	▼
Trigger Alarm Out		
<input type="checkbox"/> Alarm Out		
<input type="checkbox"/> Trigger Audio Alarm		
<input type="checkbox"/> Trigger SD Card Snapshot		
<input type="checkbox"/> Trigger SD Card Recording		
<input type="checkbox"/> Trigger Email		
<input type="checkbox"/> Trigger FTP		
Save		

1. Check “Enable” check box to activate motion based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or CMS, even if there is motion in the video.

Alarm Holding Time: it refers to the time that the alarm extends for after an alarm ends. For instance, if the alarm holding time is set to 20 seconds, once the camera detects a motion, it will go to alarm and would not detect any other motion in 20 seconds. If there is another motion detected during this period, it will be considered as continuous movement; otherwise it will be considered as a single motion.

Alarm Out: If selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm.

Trigger Audio Alarm: If selected, the warning voice will play automatically on detecting a motion based alarm. (Please set the warning voice first. See [Audio Alarm](#) for details).


Trigger SD Card Snapshot: If selected, the system will capture images on motion detection and save the images on an SD card.

Trigger SD Card Recording: If selected, video will be recorded on an SD card on motion detection.

Trigger Email: If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

Trigger FTP: If “Trigger FTP” and “Attach Picture” are checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration section for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

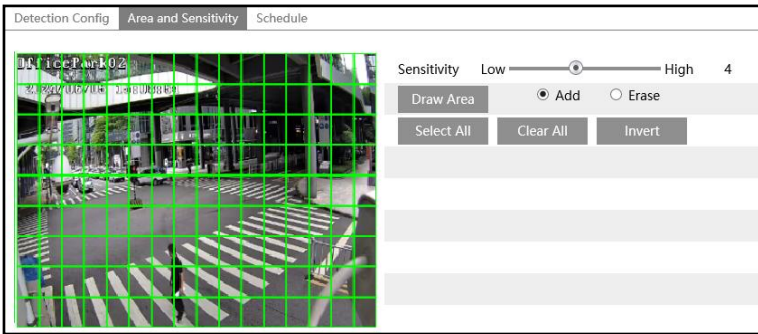

Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily.

Select “Add” and click “Draw”. Drag the mouse to draw the motion detection area; Select “Erase” and drag the mouse to clear motion detection area.


After that, click the “Save” to save the settings.

3. Set the schedule for motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup (See [Schedule Recording](#)).

3.3.2 Exception Alarm

- SD Card Full

1. Go to *Config* → *Alarm* → *Exception Alarm* → *SD Card Full*.

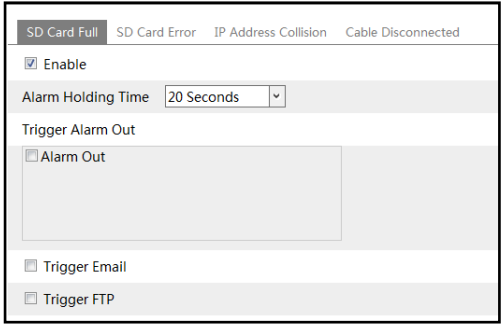


2. Click “Enable” and set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

● **SD Card Error**

When there are some errors in writing SD card, the corresponding alarms will be triggered.


1. Go to *Config* → *Alarm* → *Exception Alarm* → *SD Card Error* as shown below.

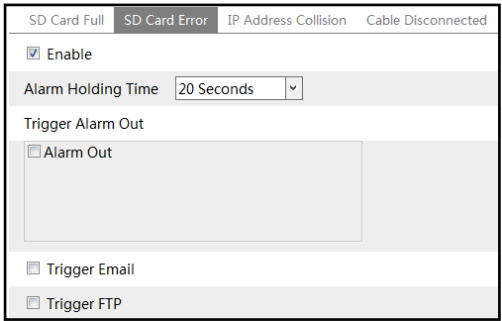

2. Click “Enable” and set the alarm holding time.
3. Set alarm trigger options. Trigger alarm out, Email and FTP. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

● **IP Address Conflict**


1. Go to *Config* → *Alarm* → *Exception Alarm* → *IP Address Collision* as shown below.

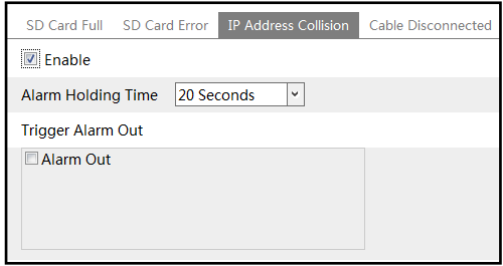

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the IP address of the camera is in conflict with the IP address of other devices, the system will trigger the alarm out.

● **Cable Disconnection**

1. Go to *Config* → *Alarm* → *Exception Alarm* → *Cable Disconnected* as shown below.

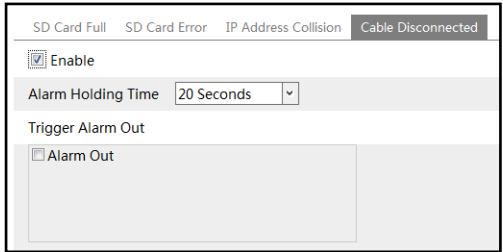

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out.

3.3.3 Alarm In

To set sensor alarm (alarm in):

Go to *Config* → *Alarm* → *Alarm In* interface as shown below.

Detection Config		Schedule
<input checked="" type="checkbox"/> Enable		
Alarm Type	NO	
Alarm Holding Time	20 Seconds	
Sensor Name	<input type="text"/>	
Trigger Alarm Out		
<input type="checkbox"/> Alarm Out		
<input type="checkbox"/> Trigger Audio Alarm		
<input type="checkbox"/> Trigger SD Card Snapshot		
<input type="checkbox"/> Trigger SD Card Recording		
<input type="checkbox"/> Trigger Email		
<input type="checkbox"/> Trigger FTP		

1. Click “Enable” and set the alarm type, alarm holding time and sensor name.
2. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.
3. Click “Save” button to save the settings.
4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

3.3.4 Alarm Out

Go to *Config* → *Alarm* → *Alarm Out*.

Alarm Out Mode	Alarm Linkage
Alarm Out Name	alarmOut1
Alarm Holding Time	20 Seconds
Alarm Type	NC
<input type="button" value="Save"/>	

Alarm Out Mode: Alarm linkage, manual operation and timing are optional.

Alarm Linkage: Having selected this mode, set alarm out name and select alarm holding time

at the “Alarm Holding Time” pull down list box and alarm type.

Manual Operation: Having selected this mode, set alarm type and then click “Open” to trigger the alarm out immediately; click “Close” to stop alarm.

The screenshot shows a configuration window for the 'Manual Operation' alarm mode. It contains two dropdown menus: 'Alarm Out Mode' set to 'Manual Operation' and 'Alarm Type' set to 'NC'. Below these are two buttons labeled 'Open' and 'Close', and a 'Save' button at the bottom right.

Day/Night Switch Linkage: Having selected this mode, select the alarm type and then choose to open or close alarm out when the camera switches to day mode or night mode.

The screenshot shows a configuration window for the 'Day/night switch linkage' alarm mode. It contains four dropdown menus: 'Alarm Out Mode' set to 'Day/night switch linkage', 'Alarm Type' set to 'NC', 'Day' set to 'Close', and 'Night' set to 'Close'. There are no buttons visible in this view.

Timing: Select alarm type and click “Add” and drag the mouse on the timeline to set the schedule of alarm out; click “Erase” and drag the mouse on the timeline to erase the set time schedule. After this schedule is saved, the alarm out will be triggered in the specified time.

The screenshot shows a configuration window for the 'Timing' alarm mode. It has two dropdown menus: 'Alarm Out Mode' set to 'Timing' and 'Alarm Type' set to 'NC'. Below them is a timeline labeled 'Time Range' with a scale from 0 to 24. A blue bar indicates a 'Manual Input' from approximately 18:00 to 23:00. To the right of the timeline are radio buttons for 'Erase' and 'Add', with 'Add' selected. A 'Save' button is at the bottom right.

3.3.5 Alarm Server

Go to *Alarm → Alarm Server* interface as shown below.

Set the server address, port, heartbeat and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.

Server Address	<input type="text" value="0.0.0.0"/>
Port	<input type="text" value="8010"/>
Heartbeat	<input type="text" value="Disable"/> ▼
Heartbeat interval	<input type="text" value="30"/> Second

3.3.6 Audio Alarm

Enable audio alarm. If disabled, the camera will not play the desired warning voice even if an event triggers audio alarm. Additionally, you need to enable audio in the audio configuration interface and the speaker/audio output type should be “Warning” or “Auto”, or the warning voice cannot play too.

<input type="button" value="Sound configuration"/> <input type="button" value="Schedule"/>	
<input checked="" type="checkbox"/> Enable	
Voice Configuration	
Warning voice	<input type="text" value="English"/> ▼
Voice	<input type="text" value="Alarm sound"/> ▼
Warning Times	<input type="text" value="5"/> times
Volume	<input type="range" value="100"/> <input type="text" value="100"/> <input type="button" value="Speaker"/>
Audio List	<input type="text" value="Restricted area, leave as sc"/> ▼ <input type="button" value="Listen"/>

① Select the warning voice. If you want to customize the voice, you can choose “Customize”. Click “Browse” to choose the audio file you want to upload and then enter the audio name. Finally, click “Upload” to upload the audio file. Note that the format of the audio file must meet the requirement (see Tips), or it will not be uploaded. After you upload the audio file, you can select the audio name and click “Listen” to listen to it. Click “Delete” to delete the audio.

Voice Configuration

Warning voice:

Voice:

Warning Times: times

Volume:

Upload Audio

Upload Path:

Audio Name:

Tips: audio format (WAV, 8000Hz, monophonic, 16bit, less than 300K)

Voice Record

Save Path:

Audio Name:

Record Audio: 10

Audio List:

You can also record your own voice in the above interface and then upload.

- Insert the microphone into your PC.
- Click “Select File” to choose the save path of the audio you want to record.
- Set the record audio volume and then click “Start” to start recording your voice.
- Click “Upload” to upload your customized voice.

Note: The voice can be recorded only when you log in via the plug-in required browser.

② Set the warning times and volume as needed.

Warning times: it ranges from 1 to 50.

③ Set the schedule of audio alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

④ Click “OK” to save the settings.

3.4 Event Configuration

For more accuracy, here are some recommendations for installation.


- Cameras should be installed on stable surfaces, as vibrations can affect the accuracy of detection.
- Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
- Avoid places that are narrow or have too much shadowing.
- Avoid scenario where the object’s color is similar to the background color.
- At any time of day or night, please make sure the image of the camera is clear and with adequate and even light, avoiding overexposure or too much darkness on both sides.

3.4.1 Video Exception

This function can detect changes in the surveillance environment affected by the external factors.

To set exception detection:

Go to **Config** → **Event** → **Video Exception** interface as shown below.

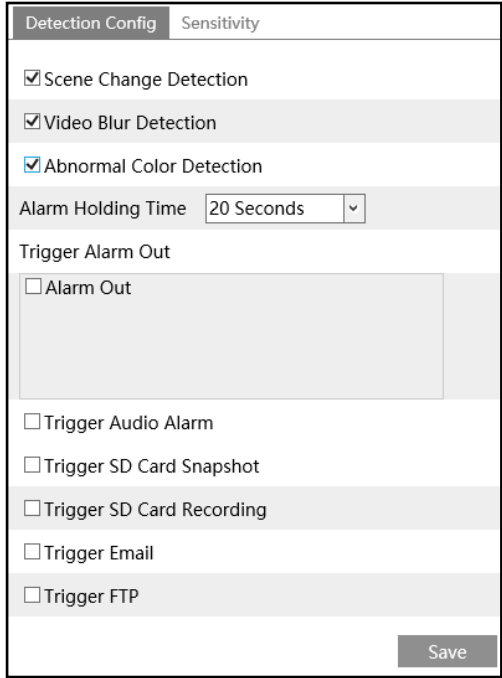

1. Enable the applicable detection that’s desired.

Scene Change Detection: Alarms will be triggered if the scene of the monitor video has changed.


Video Blur Detection: Alarms will be triggered if the video becomes blurry.

Abnormal Color Detection: Alarms will be triggered if the image is abnormal because of color deviation.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

3. Click “Save” button to save the settings.

4. Set the sensitivity of the video exception detection. Click “Sensitivity” tab to go to the interface as shown below.

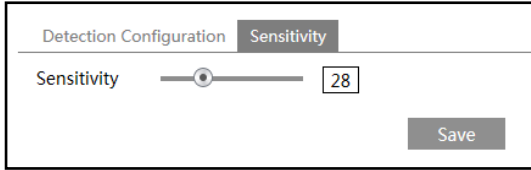

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click “Save” button to save the settings.

The sensitivity value of Scene Change Detection: The higher the value is, the more sensitive the system responds to the amplitude of the scene change.

The sensitivity value of Video Blur Detection: The higher the value is, the more sensitive the system responds to the blurriness of the image.

The sensitivity value of Abnormal Color Detection: The higher the value is, the more sensitive the system responds to the color shift of the image.

※ **The requirements of camera and surrounding area**

1. Auto-focusing function should not be enabled for exception detection.
2. Try not to enable exception detection when light changes greatly in the scene.
3. Please contact us for more detailed application scenarios.

3.4.2 Line Crossing

Line Crossing: Alarms will be triggered if someone or something crosses the pre-defined alarm lines.

Go to *Config* → *Event* → *Line Crossing* interface as shown below.

1. Enable line crossing alarm and select the snapshot type and the detection target.

Save Original Picture to SD Card: If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets cross the alarm line.

Save Target Picture to SD Card: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets cross the alarm line.

Note: Saving snapshots to the local PC shall enable “Local Smart Snapshot Storage” in the local config interface first. Saving snapshots to the SD card shall install an SD card and enable “Trigger Snap” first.

Detection Target:

Human: Select it and then alarms will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) crosses the pre-defined alarm lines.


Motorcycle/Bicycle: Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) crosses the pre-defined alarm lines.

All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Click “Save” button to save the settings.
5. Set area and sensitivity of the line crossing alarm. Click the “Area” tab to go to the interface as shown below.

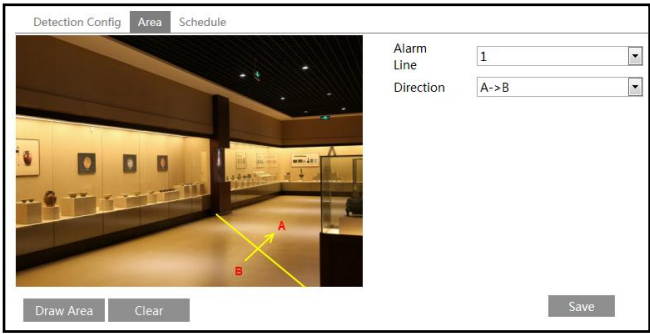

Set the alarm line number and direction. Up to 4 lines can be added. Multiple lines cannot be added simultaneously.

Direction: A<->B, A->B and A<-B optional. This indicates the direction of the intruder who crosses over the alarm line that would trigger the alarm.

A<->B: The alarm will be triggered when the intruder/vehicle crosses over the alarm line from B to A or from A to B.

A->B: The alarm will be triggered when the intruder/vehicle crosses over the alarm line from A to B.

A<-B: The alarm will be triggered when the intruder/vehicle crosses over the alarm line from B to A.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines. Click the “Save” button to save the settings.

6. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup (See [Schedule Recording](#)).

※ **Configuration of camera and surrounding area**

1. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
2. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
3. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
4. Adequate light and clear scenery are crucial to line crossing detection.

3.4.3 Region Intrusion

Region Intrusion: Alarms will be triggered if the target intrudes into the pre-defined areas.

Detection Config		Area	Schedule
<input checked="" type="checkbox"/> Enable			
<input type="checkbox"/> Save Original Picture To SD Card			
<input type="checkbox"/> Save Target Picture To SD Card			
Detection target and sensitivity			
Target	Sensitivity		
<input checked="" type="checkbox"/> Human	<input type="range" value="50"/>		50
<input checked="" type="checkbox"/> Motor Vehicle	<input type="range" value="50"/>		50
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<input type="range" value="50"/>		50
Alarm Holding Time	20 Seconds		▼
Trigger Alarm Out			
<input type="checkbox"/> Alarm Out			
<input type="checkbox"/> Trigger Audio Alarm			
<input type="checkbox"/> Trigger SD Card Snapshot			
<input type="checkbox"/> Trigger SD Card Recording			
<input type="checkbox"/> Trigger Email			
<input type="checkbox"/> Trigger FTP			

1. Enable line crossing alarm and select the snapshot type and the detection target.

Save Original Picture to SD Card: If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets intrude into the pre-defined areas.

Save Target Picture to SD Card: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets intrude into the pre-defined areas.


Note: Saving snapshots to the local PC shall enable “Local Smart Snapshot Storage” in the local config interface first. Saving snapshots to the SD card shall install an SD card and enable “Trigger Snap” first.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Click the “Save” button to save the settings.

5. Set the alarm area of the intrusion detection. Click the “Area” tab to go to the interface as shown below.

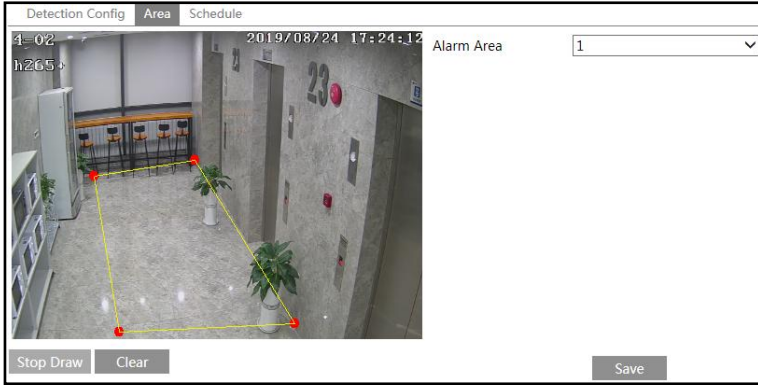

Set the alarm area number on the right side. Up to 4 alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

6. Set the schedule of the intrusion detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

※ **Configuration requirements of camera and surrounding area**

1. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
2. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
3. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
4. Adequate light and clear scenery are crucial to intrusion detection.

3.4.4 Region Entrance

Region Entrance: Alarms will be triggered if the target enters the pre-defined areas.

Go to **Config** → **Event** → **Region Entrance** interface.

1. Enable region entrance detection and select the snapshot type and the detection target.
2. Set the alarm holding time and alarm trigger options.
3. Set the alarm area of the region entrance detection.
4. Set the schedule of the region entrance detection.

The setup steps of the region entrance detection are the same as the region intrusion detection setup (See [Region Intrusion](#) for details).

3.4.5 Region Exiting

Region Exiting: Alarms will be triggered if the target exits from the pre-defined areas.

Go to **Config** → **Event** → **Region Exiting** interface.

1. Enable region exiting detection and select the snapshot type and the detection target.
2. Set the alarm holding time and alarm trigger options.
3. Set the alarm area of the region exiting detection.
4. Set the schedule of the region exiting detection.

The setup steps of the region exiting detection are the same as the region intrusion detection setup (See [Region Intrusion](#) for details).

3.5 Network Configuration

3.5.1 TCP/IP

Go to **Config** → **Network** → **TCP/IP** interface as shown below. There are two ways for network connection.

The screenshot shows the 'TCP/IP' configuration page with the following fields and values:

Field	Value	Action
Obtain an IP address automatically	<input type="radio"/>	
Use the following IP address	<input checked="" type="radio"/>	
IP Address	192.168.226.201	Test
Subnet Mask	255.255.255.0	
Gateway	192.168.226.1	
Preferred DNS Server	210.21.196.6	
Alternate DNS Server	8.8.8.8	

Use IP address (take IPv4 for example)-There are two options for IP setup: obtain an IP address automatically by DHCP and use the following IP address. Please choose one of the options as needed.

Test: Test the effectiveness of the IP address by clicking this button.


Use PPPoE-Click the “PPPoE Config” tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

The screenshot shows the 'PPPoE Config' page with the following fields and values:

Field	Value
Enable	<input checked="" type="checkbox"/>
User Name	xxxxxxx
Password	•••••
Save	

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click “IP Change Notification Config” to go to the interface as shown below.

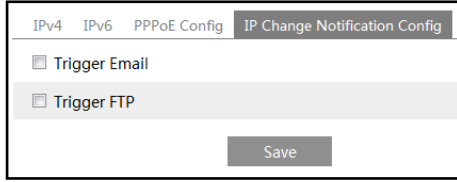


Trigger Email: when the IP address of the device is changed, the new IP address will be sent to the email address that has been set up.

Trigger FTP: when the IP address of the device is changed, the new IP address will be sent to FTP server that has been set up.

3.5.2 Port

Go to *Config* → *Network* → *Port* interface as shown below. HTTP port, Data port and RTSP port can be set.

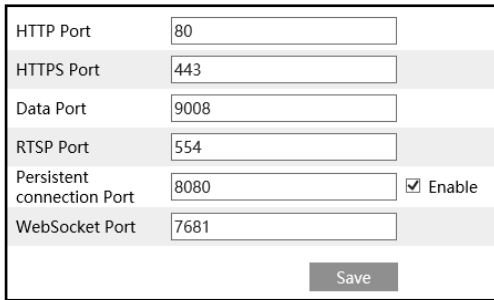

HTTP Port: The default HTTP port is 80. It can be changed to any port which is not occupied.

HTTPS Port: The default HTTPS port is 443. It can be changed to any port which is not occupied.

Data Port: The default data port is 9008. Please change it as necessary.

RTSP Port: The default port is 554. Please change it as necessary.

Persistent Connection Port: The port is used for a persistent connection of the third-party platform to push smart data, like face pictures.

WebSocket Port: Communication protocol port for plug-in free preview.

3.5.3 Server Configuration

This function is mainly used for connecting network video management system.

<input checked="" type="checkbox"/> Enable	
Server Port	<input type="text" value="2009"/>
Server Address	<input type="text"/>
Device ID	<input type="text" value="1"/>
<input type="button" value="Save"/>	

1. Check “Enable”.
2. Check the IP address and port of the transfer media server in the NVMS. Then enable the auto report in the NVMS when adding a new device. Next, enter the remaining information of the device in the NVMS. After that, the system will automatically allot a device ID. Please check it in the NVMS.
3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click “Save” to save the settings.

3.5.4 Onvif

The camera can be searched and connected to the third-party platform via ONVIF/RTSP protocol.

If “Activate Onvif User” is enabled in the device activation interface, the ONVIF user can be activated simultaneously. When you connect the camera through the ONVIF protocol in the third-party platform, you can use this onvif user to connect.

You can also add new users in the Onvif interface.

The screenshot shows the Onvif configuration page with a table of users. The 'Add' button is circled in red, and an arrow points to the 'Add User' dialog box. The table below shows the current user configuration.

Index	User Name	User Type
1	admin	Administrator

The 'Add User' dialog box contains the following fields:

- User Name:
- Password:
- Level:
- Confirm Password:
- User Type:

Below the fields, there is a note: "The password can be composed of numbers, special characters, upper or lower case letters." At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Note: when adding the device to the third-party platform with ONVIF/RTSP protocol, please

use the onvif user in the above interface.

3.5.5 DDNS


If the camera is set up with a DHCP connection, DDNS should be set for the internet.

1. Go to **Config** → **Network** → **DDNS**.

<input checked="" type="checkbox"/> Enable	
Server Type	www.dyndns.com
User Name	<input type="text"/>
Password	<input type="password"/>
Domain	<input type="text"/>
<input type="button" value="Save"/>	

2. Apply for a domain name. Take www.dvrddns.com for example.


Enter www.dvrddns.com in the IE address bar to visit its website. Then Click the “Registration” button.

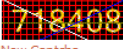NEW USER REGISTRATION	
USER NAME	<input type="text" value="xxxx"/>
PASSWORD	<input type="password" value="•••••"/>
PASSWORD CONFIRM	<input type="password" value="•••••"/>
FIRST NAME	<input type="text" value="xxx"/>
LAST NAME	<input type="text" value="xxx"/>
SECURITY QUESTION.	My first phone number. ▾
ANSWER	<input type="text" value="xxxxxxx"/>
CONFIRM YOU'RE HUMAN	 New Captcha <input type="text"/> Enter the text you see above
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Create domain name.

<i>You must create a domain name to continue.</i>	
Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.	
<input type="text"/>	dvrddns.com ▾ <input type="button" value="Request Domain"/>

After the domain name is successfully applied for, the domain name will be listed as below.

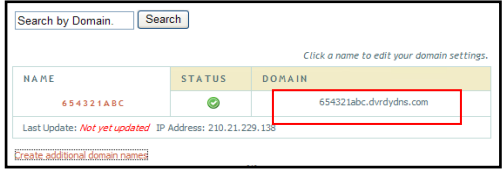

3. Enter the username, password, domain you apply for in the DDNS configuration interface.
4. Click the “Save” button to save the settings.

3.5.6 SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of the SNMP, such as SNMP port, trap address.

1. Go to **Config** → **Network** → **SNMP**.

SNMP v1/v2	
<input type="checkbox"/> Enable SNMPv1	
<input type="checkbox"/> Enable SNMPv2	
Read SNMP Community	public
Write SNMP Community	private
Trap Address	192.168.226.201
Trap Port	162
Trap community	public
SNMP v3	
<input type="checkbox"/> Enable SNMPv3	
Read User Name	public
Security Level	auth, priv
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	••••••••
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	••••••••
Write User Name	private
Security Level	auth, priv
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	••••••••
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	••••••••
Other Settings	
SNMP Port	161

2. Check the corresponding version checkbox (Enable SNMPv1, Enable SNMPv2, Enable SNMPv3) according to the version of the SNMP software that will be used.

3. Set the values for “Read SNMP Community”, “Write SNMP Community”, “Trap Address”, “Trap Port” and so on. Please make sure the settings are the same as that of the SNMP software.

Note: Please use the different version in accordance with the security level you required. The higher the version is, the higher the level of the security is.

3.5.7 802.1x

IEEE802.X which is an access control protocol. The setup steps are as follows:

<input checked="" type="checkbox"/> Enable	
Protocol Type	EAP_MD5
EAPOL Version	1
User Name	test
Password	•••••
Confirm Password	•••••

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be reckoned as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type and EAPOL version: Please use the default settings.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

3.5.8 RTSP

Go to *Config* → *Network* → *RTSP*.

<input checked="" type="checkbox"/> Enable	
Port	554
Address	rtsp://IP or domain name:port/profile1
	rtsp://IP or domain name:port/profile2
	rtsp://IP or domain name:port/profile3
Multicast address	
Main stream	239.0.0.0 50554 <input type="checkbox"/> Automatic start
Sub stream	239.0.0.1 51554 <input type="checkbox"/> Automatic start
Third stream	239.0.0.2 52554 <input type="checkbox"/> Automatic start
Audio	239.0.0.3 53554 <input type="checkbox"/> Automatic start
<input type="checkbox"/> Allow anonymous login (No username or password required)	
Save	

Select “Enable” to enable the RTSP function.

Port: Access port of the streaming media. The default number is 554.

RTSP Address: The RTSP address (unicast) format that can be used to play the stream in a media player.

Multicast Address

Main stream: The address format is

“rtsp://IP address: rtsp port/profile1?transportmode=mcst”.

Sub stream: The address format is
“rtsp://IP address: rtsp port/profile2?transportmode=mcast”.

Third stream: The address format is
“rtsp://IP address: rtsp port/profile3?transportmode=mcast”.

Audio: Having entered the main/sub stream in a VLC player, the video and audio will play automatically.

If “Allow anonymous login...” is checked, there is no need to enter the username and password to view the video.

If “auto start” is enabled, the multicast received data should be added into a VLC player to play the video.

Note:1. This camera support local play through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcast) in a VLC player to realize the simultaneous play with the web client.

- 2. The IP address mentioned above cannot be the address of IPv6.
- 3. Avoid the use of the same multicast address in the same local network.
- 4. When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot be played.
- 5. If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

3.5.9 RTMP

You can access the third-party (like YouTube) to realize video live view through RTMP protocol.

Go to **Config** → **Network** → **RTMP**.

<input checked="" type="checkbox"/> Enable (Only supports H264)
Stream Type: <input checked="" type="radio"/> Main stream <input type="radio"/> Sub stream <input type="radio"/> Third stream
Reconnect After Timeout: <input type="text" value="30"/> Second
Server Address: <input type="text" value="example: rtmp://127.0.0.1:1935/live/liv"/>
Connection Status: <input type="button" value="Not Connected"/> <input type="button" value="Refresh"/>
<input type="button" value="Save"/>

Check “Enable”, select stream type, set the reconnection time after timeout and server address as needed.

Server address: Enter the server address allocated by the third party server. After that, click “Save” to save the settings. Then click “Refresh” to view the connection status.

3.5.10 UPNP

If this function is enabled, the camera can be quickly accessed through the LAN. Go to **Config** → **Network** → **UPnP**. Enable UPnP and then enter UPnP name.

Enable

UPnP Name

Save

3.5.11 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to *Config* → *Network* → *Email*.

Sender

Sender Address

User Name Anonymous Login

Password

Server Address

Secure Connection

SMTP Port Default

Send Interval(S) (10-3600)

Clear Test

Recipient

Recipient Address

Add Delete

Save

Sender Address: sender’s e-mail address.

User name and password: sender’s user name and password (you don’t have to enter the username and password if “Anonymous Login” is enabled).

Server Address: The SMTP IP address or host name.

Select the secure connection type at the “Secure Connection” pull-down list according to what’s required.

SMTP Port: The SMTP port.

Send Interval(S): The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two

emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.


Click the “Test” button to test the connection of the account.

Recipient Address: receiver’s e-mail address.

3.5.12 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

1. Go to *Config* → *Network* → *FTP*.

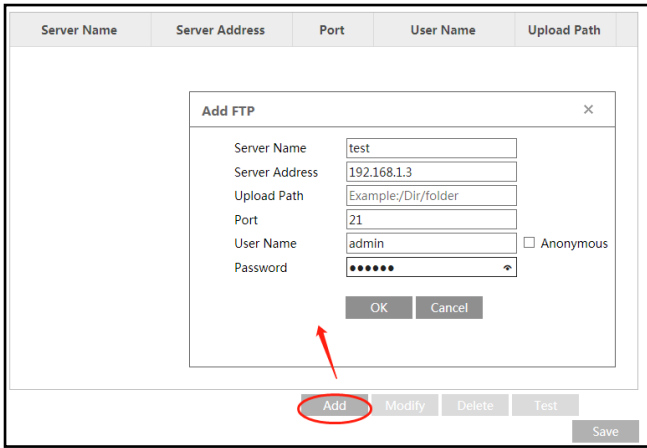

1. Click “Add” to add the information of the FTP. After that, click “Save” to save the settings.

Server Name: The name of the FTP server.

Server Address: The IP address or domain name of the FTP.

Upload Path: The directory where files will be uploaded to.

Port: The port of the FTP server.

User Name and Password: The username and password that are used to login to the FTP server.

2. In the event setting interface (like intrusion, line crossing, etc.), trigger FTP as shown below.

Trigger FTP

Server Address

192.168.1.3 Attach Picture

Save

Rule of FTP storage path: /device MAC address/event type/date/time/

For example: a motion detection alarm occurs

FTP file path: \00-18-ae-a8-da-2a\MOTION\2021-01-09\14\

Event name table:

File Name	Event Type
IP	IP address change
MOTION	Motion Detection
SENSOR	Sensor Alarm
TRIPWIRE	Line Crossing Detection
PERIMETER	Region Intrusion Detection
AVD	Video Exception
AOIENTRY	Region Entrance
AOILEAVE	Region Exiting
SDFULL	SD Full
SDERROR	SD Error

TXT file content:

device name: xxx mac: device MAC address Event Type time:

For example:

device name: IPC mac: 00-18-ae-a8-da-2a MOTION time: 2021-03-16 12:20:07

3.5.13 HTTP POST

Go to *Config* → *Network* → *HTTP POST* interface.

Check “Enable”, select protocol type and then set the server address (IP address/domain name), server port and heartbeat interval.

<input checked="" type="checkbox"/> Enable
Protocol Type <input type="text" value="API"/>
Server Address <input type="text" value=" . . ."/>
Server Port <input type="text" value="8082"/>
Heartbeat interval <input type="text" value="90"/> Second
Online State <input type="text" value="Offline"/> <input type="button" value="Refresh"/>
<input type="button" value="Save"/>

Server address: the IP address/domain name of the third-party platform.

Server port: the server port of the third-party platform.

After the above parameters are set, click “Save” to save the settings. Then the camera will automatically connect the third-party platform. The online state can be viewed in the above interface. After the camera is successfully connected, it will send the alarm information (HTTP format) to the third-party platform once the smart alarm is triggered. The alarm information includes target tracing coordinates, target features, the captured original/target image (like the captured motor vehicle picture) and so on.

3.5.14 HTTPS


HTTPS provides authentication of the web site and protects user privacy.

Go to **Config** → **Network** → **HTTPS** as shown below.


<input checked="" type="checkbox"/> Enable
<input type="checkbox"/> Disable HTTP port (Checking this option may cause no image displayed in Google/Firefox!)
Certificate installed C=US, ST=Some-State, O=embeddedsoftw <input type="button" value="Delete"/>
Attribute Issued to: C=US, ST=Some-State, O=embeddedsoftware, H=IPC, Issuer: C=US, ST=Some-State, O=embeddedsoftware, H=Root CA, Validity date: 2021-03-19 03:18:30 ~ 2031-03-17 03:18:30
<input type="button" value="Save"/>

There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via the web browser (eg. https://192.168.226.201:443).

A private certificate can be created if users don’t want to use the default one. Click “Delete” to cancel the default certificate. Then the following interface will be displayed.

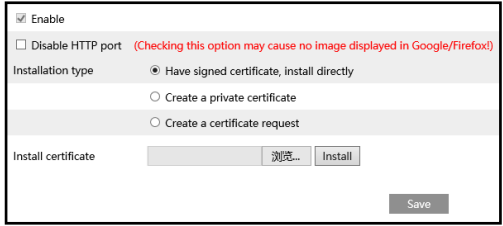


- * If there is a signed certificate, click “Browse” to select it and then click “Install” to install it.
- * Click “Create a private certificate” to enter the following creation interface.

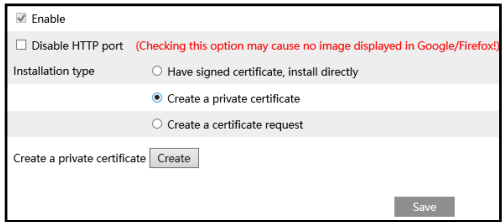

Click “Create” to create a private certificate. Enter the country (only two letters available), domain (camera’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.

- * Click “Create a certificate request” to enter the following interface.

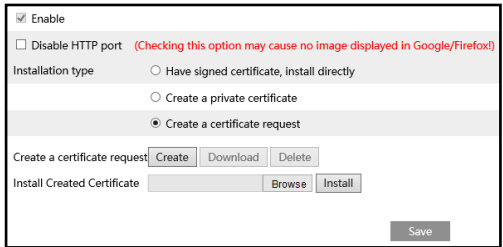

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, install the certificate to the device.

3.5.15 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With the deficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to *Config* → *Network* → *QoS*.

Video/Audio DSCP	13
Alarm DSCP	35
Manager DSCP	53

Video/Audio DSCP: The range is from 0 to 63.

Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.

Generally speaking, the larger the number is, the higher the priority is.

3.6 Security Configuration

3.6.1 User Configuration

Go to *Config* → *Security* → *User* interface as shown below.

Index	User Name	User Type
1	admin	Administrator

Add user:

1. Click the “Add” button to bring the following textbox.

Add User
✕

User Name

Password

Level

8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included.

Confirm Password

User Type

Select All

- Remote System settings
- Remote image settings
- Remote PTZ control
- Remote Alarm configuration
- Remote intelligent event configuration
- Remote network advanced configuration
- Remote security management

OK
Cancel

2. Enter user name in “User Name” textbox.
3. Enter the password in the “Password” and “Confirm Password” textbox. Please set the password according to the requirement of the password security level (Go to **Config** → **Security** → **Security Management** → **Password Security** interface to set the security level).
4. Choose the user type and select the desired user permissions.
5. Click the “OK” button and then the newly added user will be displayed in the user list.

Modify user:

1. Select a user to modify password if necessary in the user configuration list box.
2. The “Edit user” dialog box appears by clicking the “Modify” button.

The screenshot shows the 'Edit User' dialog box with the following details:

- User Name:** admin
- Old Password:** (empty)
- New Password:** (empty) with a checkmark icon to its right.
- Level:** (empty) with a note: "8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included."
- Confirm Password:** (empty)
- User Type:** Administrator (dropdown menu)
- Permissions List:**
 - Select All
 - Remote System settings
 - Remote image settings
 - Remote PTZ control
 - Remote Alarm configuration
 - Remote intelligent event configuration
 - Remote network advanced configuration
 - Remote security management
- Buttons:** OK and Cancel

3. Enter the old password of the user in the “Old Password” text box.
4. Enter the new password in the “New password” and “Confirm Password” text box.
5. Select the user permissions for advanced or normal user.
6. Click the “OK” button to save the settings.

Note: When the password level is set to “Strong”, the password cannot be set the same as the previous five.

Delete user:

1. Select the user to be deleted in the user configuration list box.

2. Click the “Delete” button to delete the user.

Note: The default administrator account cannot be deleted.

Safety Question Settings: set the questions and answers for admin so as to reset the password after you forget the password.

3.6.2 Online User

Go to *Config*→*Security*→*Online User* to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	192.168.17.232	55760	admin	Administrator	Kick Out

An administrator user can kick out all the other users (including other administrators).

3.6.3 Block and Allow Lists

Go to *Config*→*Security*→*Block and Allow Lists* as shown below.

The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6 and then enter IP address in the address box and click the “Add” button.

3.6.4 Security Management


Go to *Config*→*Security*→*Security Management* as shown below.

In order to prevent against malicious password unlocking, “Illegal Login lockout” function can be enabled here. If this function is enabled, login failure after trying five times will make

the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

Trigger Email: if enabled, e-mail will be sent when logging in/out or failure login lock occurs.

● **Password Security**

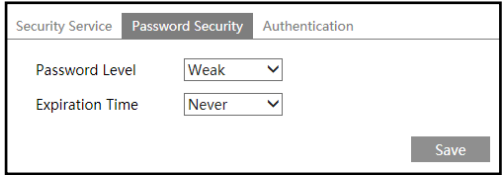

The screenshot shows a configuration interface with three tabs: "Security Service", "Password Security", and "Authentication". The "Password Security" tab is active. It contains two dropdown menus: "Password Level" set to "Weak" and "Expiration Time" set to "Never". A "Save" button is located at the bottom right of the form.

Please set the password level and expiration time as needed.

Password Level: Weak, Medium or Strong.


Weak level: Numbers, special characters, upper or lower case letters can be used. You can choose one of them or any combination of them when setting the password.

Medium Level: 8~16 characters, including at least two of the following categories: numbers, special characters, upper case letters and lower case letters.

Strong Level: 8~16 characters. Numbers, special characters, upper case letters and lower case letters must be included.

For your account security, it is recommended to set a strong password and change your password regularly.

HTTP Authentication: Basic or Token is selectable.

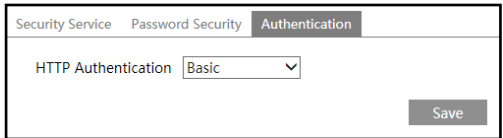


The screenshot shows a configuration interface with three tabs: "Security Service", "Password Security", and "Authentication". The "Authentication" tab is active. It contains one dropdown menu: "HTTP Authentication" set to "Basic". A "Save" button is located at the bottom right of the form.

3.7 Maintenance Configuration

3.7.1 Backup and Restore

Go to Config→Maintenance→Backup & Restore.

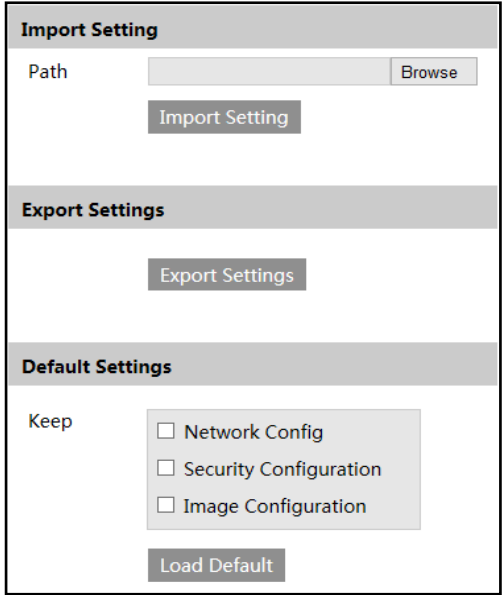

● **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

1. Click “Choose File” to select the save path for import or export information on the PC.
2. Click the “Import Setting” or “Export Setting” button.

Note: The login password needs to be entered after clicking the “Import Setting” button.

● **Default Settings**

Click the “Restore Default Parameters” button and then verify the password to restore all parameters to the default parameters except those you want to keep.

3.7.2 Reboot


Go to Config→Maintenance→Reboot.
Click the “Reboot” button to reboot the device.

Scheduled Reboot Setting:

If necessary, the camera can be set up to reboot on a time interval. Enable “Time Settings”, set the date and time and then click the “Save” button to save the settings.

3.7.3 Upgrade

Go to Config→Maintenance→Upgrade. In this interface, the camera firmware can be updated.

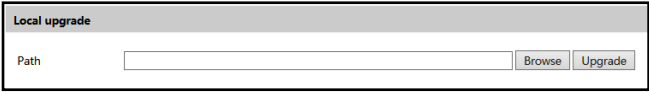

A dialog box titled "Local upgrade" with a "Path" label, a text input field, and "Browse" and "Upgrade" buttons.

1. Click the “Browse” button to select the save path of the upgrade file
2. Click the “Upgrade” button to start upgrading the firmware.
3. The device will restart automatically


Caution:

1. You cannot downgrade to a lower version.
2. Do not refresh/close the browser or disconnect the camera from the network during the upgrade, or it will cause system failure.

3.7.4 Operation Log

To query and export log:

1. Go to Config→Maintenance→Operation Log.

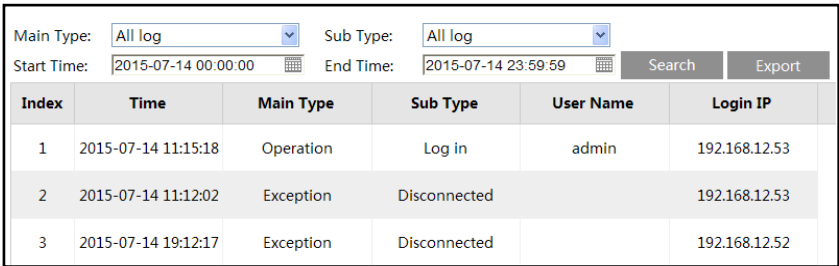

The interface shows filters for Main Type (All log), Sub Type (All log), Start Time (2015-07-14 00:00:00), and End Time (2015-07-14 23:59:59). It includes Search and Export buttons and a table with columns: Index, Time, Main Type, Sub Type, User Name, and Login IP.


Index	Time	Main Type	Sub Type	User Name	Login IP
1	2015-07-14 11:15:18	Operation	Log in	admin	192.168.12.53
2	2015-07-14 11:12:02	Exception	Disconnected		192.168.12.53
3	2015-07-14 19:12:17	Exception	Disconnected		192.168.12.52

2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.


4.1 Image Search


Click Search to go to the interface as shown below. Images that are saved on the SD card can be found here.


Note: When using the plug-in free browser, the local images cannot be searched.

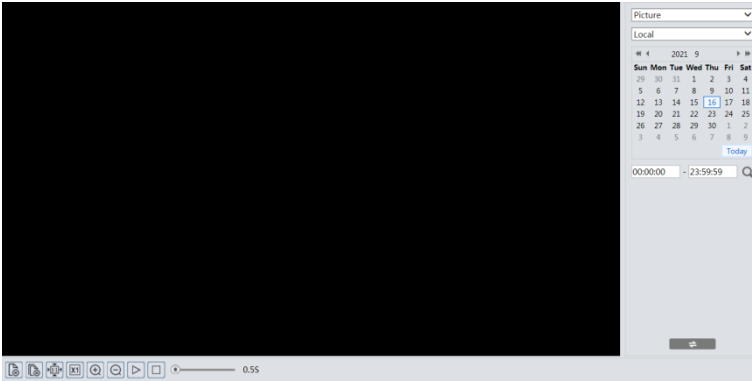

● Local Image Search


1. Choose “Picture”—“Local”.
2. Set time: Select date and choose the start and end time.
3. Click  to search the images.
4. Double click a file name in the list to view the captured photos as shown above.

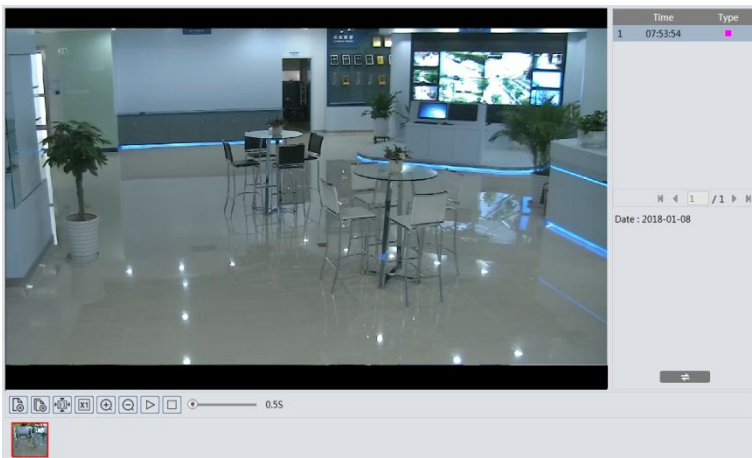



Click  to return to the previous interface.

● SD Card Image Search

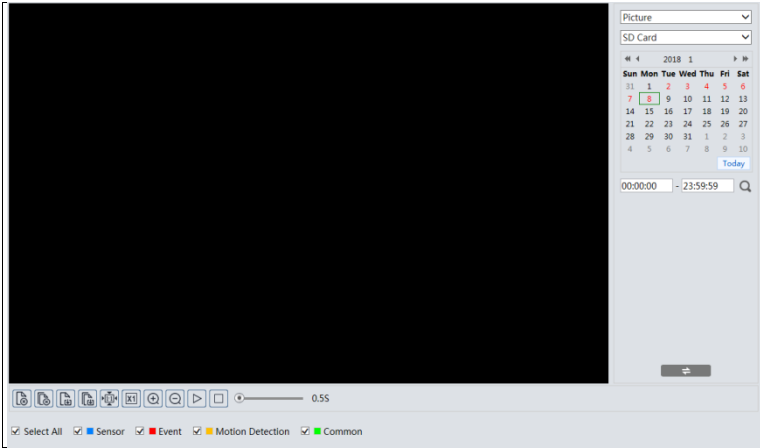










1. Choose “Picture”—“SD Card”.



2. Set time: Select date and choose the start and end time.
3. Choose the alarm events at the bottom of the interface.
4. Click  to search the images.
5. Double click a file name in the list to view the captured photos.

Click  to return to the previous interface.

The descriptions of the buttons are shown as follows.


Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		


4.2 Video Search

4.2.1 Local Video Search





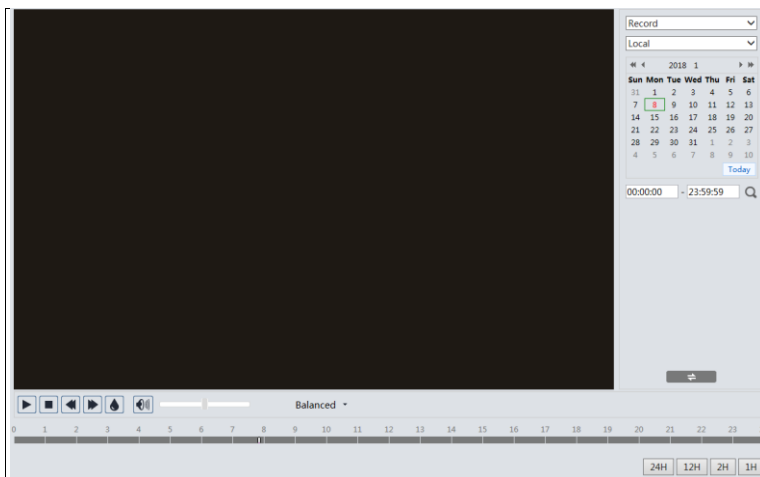


Click Search to go to the interface as shown below. Videos were recorded locally to the PC can be played in this interface.

Note: When using the plug-in free browser, the local videos cannot be searched.




1. Choose “Record”—“Local”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.
4. Double click on a file name in the list to start playback.




Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio.		


4.2.2 SD Card Video Search

Click Search to go to the interface as shown below. Videos that were recorded on the SD card can be played in this interface.

1. Choose “Record”—“SD Card”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.

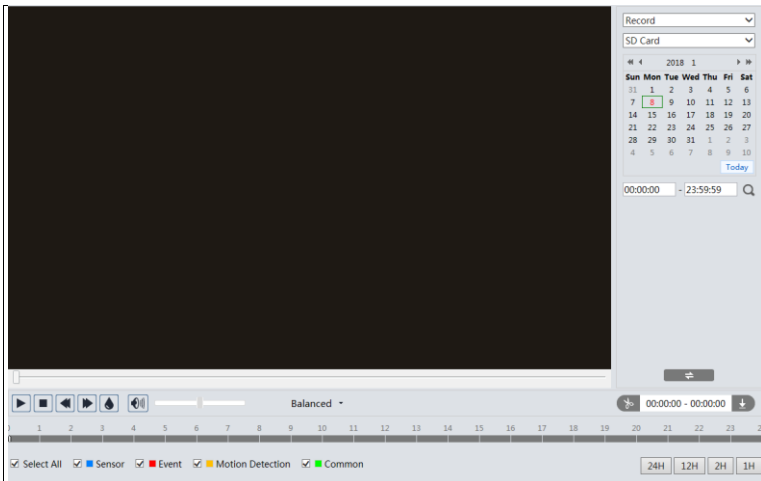

4. Select the alarm events at the bottom of the interface.
5. Select mix stream (video and audio stream) or video stream as needed.
6. Double click on a file name in the list to start playback.

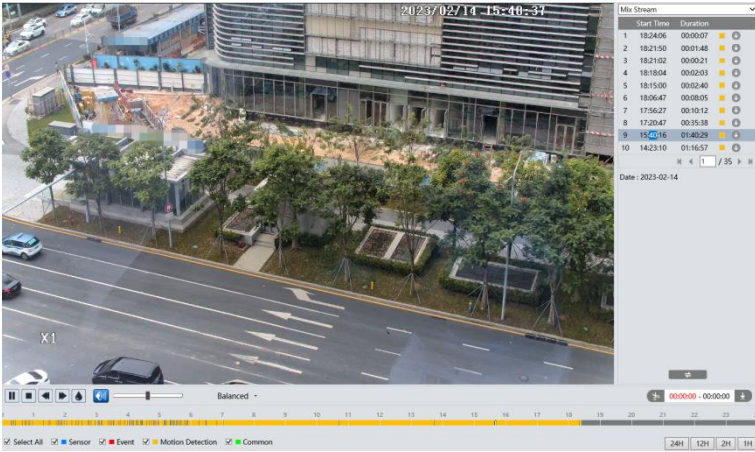

Note: *1. and cannot be displayed in the above interface via the plug-in free browser.

*2. For plug-in free playback, playback mode switch (balanced/real-time/fluent mode) and downloading functions are not supported too.

*3. For the fluent playback, it is recommended to use the plug-in required browser to play the recorded file whose resolution exceeds 2MP.

The time table can be shown in 24H/12H/2H/1H format by clicking the corresponding buttons.

Video clip and downloading

1. Search the video files according to the above mentioned steps.
2. Select the start time by clicking on the time table.
3. Click to set the start time and then this button turns blue ().
4. Select the end time by clicking on the time table. Then click to set the end time.
5. Click to download the video file in the PC.

Index	Process	Record	Start Time	End Time	Path	Operate
1	100%	Cut	2018-01-16 01:1...	2018-01-16 01:1...	Favorites	Open

Set up D:\Favorites Clear List Close

Click “Set up” to set the storage directory of the video files.

Click “Open” to play the video.

Click “Clear List” to clear the downloading list.

Click “Close” to close the downloading window.

Appendix 1 Troubleshooting

How to find the password?

A: The password for *admin* can be reset through “Edit Safety Question” function.

Click “Forget Password” in the login window and then enter the corresponding answer of the selected question in the popup window. After you correctly answer all questions, you can reset the password for *admin*. If you forget the answer of the question, this way will be invalid, please contact your dealer for help.

B: The passwords of other users can be reset by *admin*.

Fail to connect devices through IE browser.

A: Network is not well connected. Check the connection and make sure it is connected well.

B: IP address is not available. Reset the IP address.

C: Web port number has been changed: contact administrator to get the correct port number.

D: Exclude the above reasons. Restore to default setting by IP-Tool.


IP tool cannot search devices.

It may be caused by the anti-virus software in your computer. Please exit it and try to search device again.

IE cannot download ActiveX control.

A. IE browser may be set up to block ActiveX. Follow the steps below.

① Open IE browser and then click Tools-----Internet Options.

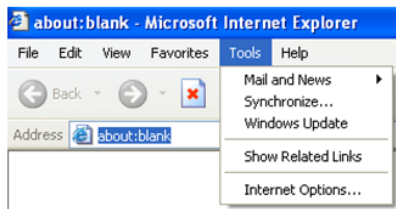


② Select Security-----Custom Level....

③ Enable all the options under “ActiveX controls and plug-ins”.

④ Click OK to finish setup.

B. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or close them.

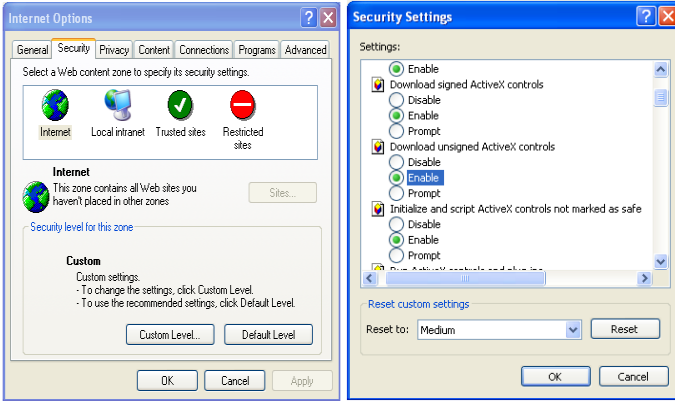


No sound can be heard.

A: Audio input device is not connected. Please connect and try again.


B: Audio function is not enabled at the corresponding channel. Please enable this function.

How to modify IP address through IP-Tool?

A: After you install the IP-Tool, run it as shown below.

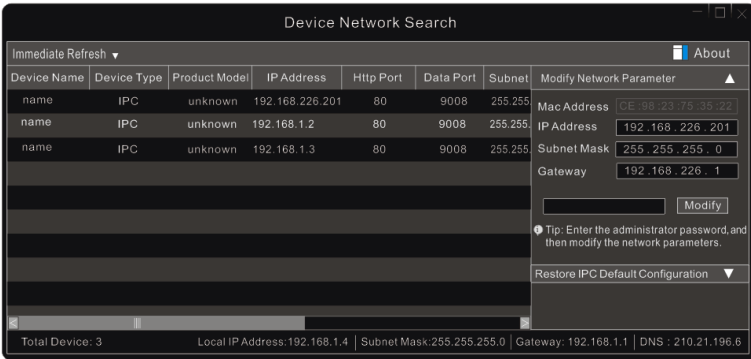

The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

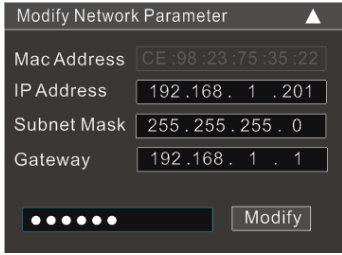

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of “admin” which is set in the device activation interface in advance and then click the “Modify” button to change the network parameters.

How to restore to factory default setting through IP-Tool?

A: Drag the slider at the bottom of the device list to the right and then the MAC address of the searched devices will be viewed. Find the MAC address of the IPC you want to restore to the factory default setting, click next to “Restore IPC Default Configuration” to expand the menu, then enter the MAC address and click “OK”. After that, manually reboot your camera within 30s. Then the camera will successfully restore to the factory default setting.

